




INSTALLATION INSTRUCTIONS



STEP 1

Unroll your Pegboard Skinz and allow to lay flat upside down for awhile prior to installation.

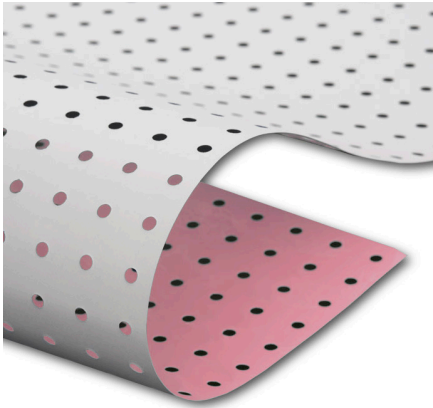


STEP 2

Prepare your gondola by removing all hooks and shelving. If you are replacing an existing Pegboard Skinz remove that along with the fasteners.





STEP 3

Determine if your Pegboard Skinz needs to be trimmed. If so, measure your coverage area, mark the appropriate length and width on your skinz. Use a box-cutter and a straight edge to trim the Pegboard Skinz to the appropriate size. If you need to trim the length, always trim the bottom edge of the Pegboard Skinz instead of the top.

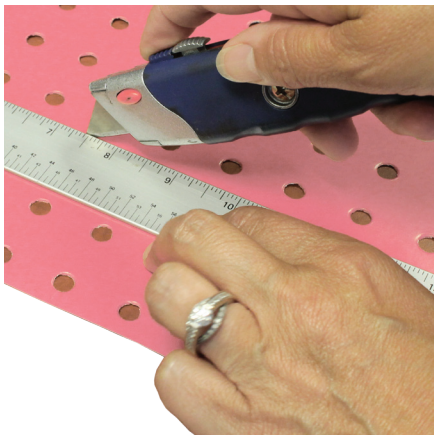

STEP 4

Use the Christmas Tree clips or other fasteners you were provided to attach the Pegboard Skinz to the pegboard. It is best to place a clip in each corner and in the middle.

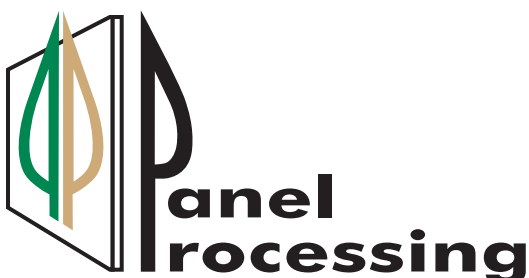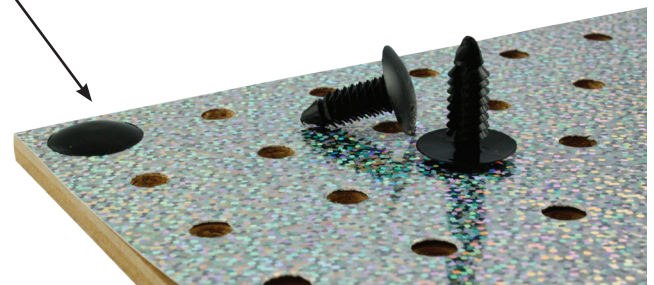

1030 Devere Drive
Alpena, MI 49707

800.433.7142
www.panel.com